


## Wiring Diagram: HCVR-DC-x Manual Extinguishant Disablement Switch

### Connections for all HCVR-DS-x models

The operation of this product is intended for indoor use only.

The wiring diagram below illustrates connections for all HCVR-DS-x models of the manual Extinguishant Disablement Switch:

**Wiring Diagram 1-1**  
**HCVR-DS Disablement Switch Connections**

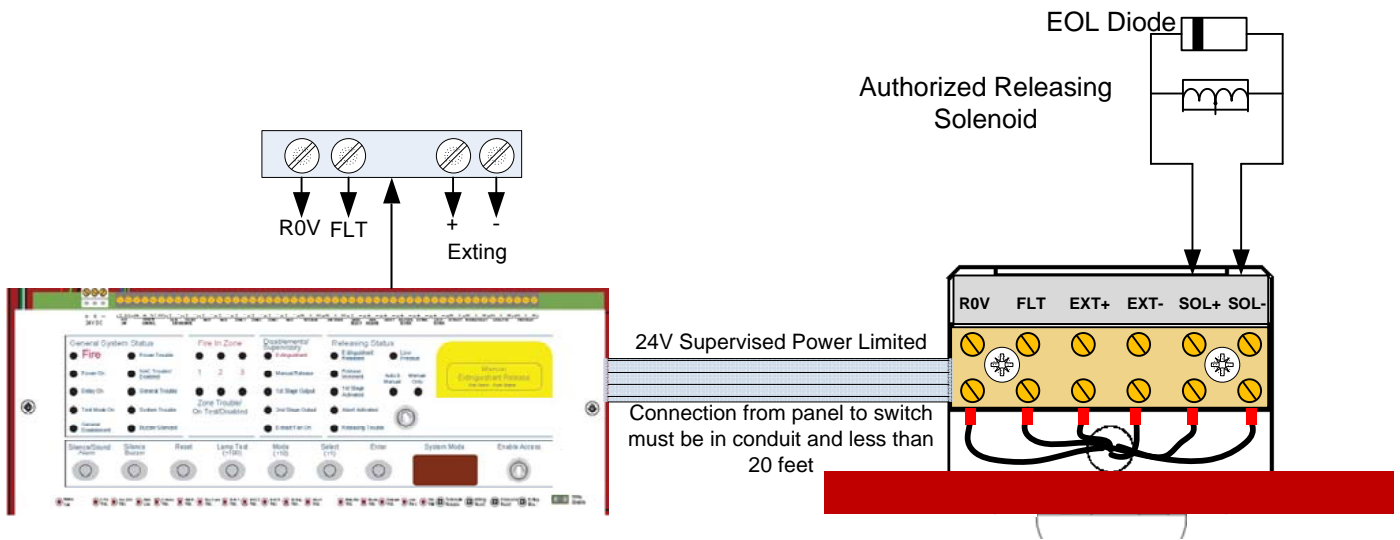

Reference the following documentation for installing, operating and configuring this device with the HCVR-3 Releasing Fire Control Panel:

- *Installation and Operation Manual of the HCVR-3 Releasing Fire Control Panel, HA-06-294,*
- *Wiring Diagram of the HCVR-AB Ancillary Board, HA-03-394*
- *Wiring Diagram of the HCVR-AS Abort Switch, HA-03-395,*

### If You Need Help

If you need technical support contact Hochiki America at (800) 845 - 6692 or e-mail [technicalsupport@hochiki.com](mailto:technicalsupport@hochiki.com). Technical support is available Monday through Friday, 7:00 AM to 5:00 PM, Pacific Standard Time.

